

# Dell N1548? ??? Enable/Disable

## 1. 37□ □ shutdown

```
#configure
(config)#interface gigabitethernet 1/0/37
(config-if-Gil/0/37)#shutdown
```

## 2. 37□ □ □

```
#configure
(config)#interface gigabitethernet 1/0/37
(config-if-Gil/0/37)#no shutdown
```

---

Revision #1

Created 2022-06-07 00:45:21 KST by artop0420

Updated 2022-06-08 03:35:10 KST by artop0420